BISSELL®

Experts In Home Cleaning™

PEThair ERASER™ CLEANview™ POWER dual cyclonic CLEANview™ DUAL CYCLONIC pet

# מדריך למשתמש

**דגם 68Z3, 42H5, 78E9 240 - 220 וולט**


2 תודה

3 הוראות בטיחות

4 מראה המוצר

5 הרכבה

8-6 הפעלה

12-9 תחזוקה וטיפול

13 פתרון בעיות

14 חלקי חילוף

15 שירות לקוחות

## אנו מודים לכם על שקניתם שואב אבק של BISSELL

אנו שמחים שרכשתם שואב אבק של BISSELL. כל מה שידוע לנו על טיפול ברצפות נכלל בתכנון ובייצור של מערכת הניקיון עתירת הטכנולוגיה הזאת לבית.

שואב האבק ביסל שלכם בנוי היטב, ואנו מגבים אותו באחריות של שנה. כמו כן, אנו מגבים אותו עם מחלקת שירות לקוחות ייעודית ובעלת ידע, כך שאם אי פעם תיתקלו בבעיות, תקבלו סיוע מהיר ומתחשב.

הסבא רבא שלי המציא את מטאטא הרצפות בשנת 1876. היום, ביסל היא חברה עולמית מובילה בתכנון, ייצור ושירות של מוצרים איכותיים לבית כמו שואב האבק של BISSELL שלכם.

שוב תודה, מכולנו כאן ב-BISSELL.



מארק ג׳. ביסל
יו״ר ומנכ״ל

# הוראות בטיחות חשובות

בעת שימוש במכשיר חשמלי, יש להקפיד על אמצעי זהירות בסיסיים, ובכלל זה:

## יש לקרוא את כל ההוראות לפני תחילת השימוש בשואב אבק העומד.

### ⚠ אזהרה: לצמצום סכנת שרפה, התחשמלות או פציעה:

- אין להשתמש מחוץ לבית או על שטחים רטובים.
- אין להשאיר את המכשיר מחובר לחשמל.
- אין להשתמש במכשיר אם הכבל או התקע ניזוקו.
- אם פתיל הזינה ניזוק, כדי להימנע מסכנה, החלפתו תיעשה ע״י היצרן, ע״י סוכן השירות שלו או ע״י אדם מוסמך אחר.
- אם המכשיר אינו פועל כראוי, אם נשמט, ניזוק, הושאר מחוץ לבית, או נפל למים, יש להחזירו למרכז שירות.
- אין למשוך או לשאת את המכשיר מכבל החשמל, אין להשתמש בכבל כידית, אין לסגור את הדלת על הכבל או למשוך את הכבל מסביב לפינות או קצוות חדים, אין לדרוס את הכבל בשואב או לחשוף את כבל החשמל למשטחים מחוממים.
- אין למשוך את הכבל כדי לנתק את השואב מהחשמל. כדי לנתק את השואב מהחשמל, אחזו בתקע והוציאו אותו מהשקע.
- אין לגעת בתקע או במכשיר בידיים רטובות.
- אין לחשוף שיער, בגדים רפויים, אצבעות או חלקי גוף לפתחים או לחלקים נעים.
- אין לשאוב חפצים חמים או בוערים כגון סיגריות, גפרורים או אפר לוחש.
- אין לשאוב חומרים דליקים או בעירים (נוזל למצית, דלק, קרוסן, וכו׳) ואין להשתמש בנוכחות נוזלים או אדים נפיצים.
- אין להשתמש בשואב בשטח סגור מלא באדים שמקורם בצבע שמן, מדלל, חומרים למניעת עש, אבק דליק, או אדים נפיצים או רעילים אחרים.
- מכשיר זה אינו מיועד לשימוש על ידי אנשים (ובכלל זה ילדים) בעלי יכולות פיזיות, סנסוריות או מנטליות מוגבלות, או על ידי אנשים חסרי ניסיון וידע, אלא אם משגיח עליהם אדם אחראי על בטיחותם או מנחה אותם כיצד להשתמש במכשיר.
- יש להשגיח על ילדים על מנת לוודא שאינם משחקים עם המכשיר.
- יש להוציא את התקע מהשקע לפני ניקוי המכשיר ולפני שמבצעים בו פעולות תחזוקה.
- אם חוט החשמל ניזוק, כדי למנוע סיכון יש להחליפו אצל היצרן או במרכז השירות.
- אין לשאוב חומרים רעילים (מלבין, אמוניה, נוזל לפתיחת סתימות, דלק וכדומה).
- אין לאפשר להשתמש בשואב כבצעצוע.
- אין להשתמש במכשיר למטרה אחרת מלבד זו המתוארת במדריך למשתמש.
- יש להשתמש רק באביזרים מומלצים על ידי היצרן.
- אין להשתמש כשאחד הפתחים חסום. יש לנקות מאבק, מוך, שערות או כל דבר אחר שעלול להפחית את זרימת האוויר.
- יש להחזיק את המכשיר על משטח ישר.
- יש לכבות את כל המתגים לפני ניתוק המכשיר מהחשמל.
- יש לפעול במשנה זהירות בעת ניקוי מדרגות.
- למכשיר זה בידוד כפול. יש להשתמש בחלקי חילוף זהים בלבד.
- אין להשתמש בשואב בהיעדר מיכל איסוף ומסננים.
- בעת שימוש במכשיר בסביבת ילדים יש להקדיש תשומת לב מירבית.
- יש לנתק את השואב מהחשמל לפני חיבור מברשת TurboBrush™ Pet.
- אין לשאוב חפצים קשים או חדים כגון זכוכיות, ציפורניים, ברגים, מטבעות וכו׳.

## שמרו הוראות אלה לשימוש עתידי

דגם זה מיועד לשימוש ביתי בלבד.

## חשוב

המכשיר נועד לשימוש במתח 220-240 וולט בתדר 50/60 הרץ בלבד.

**⚠ זהירות:**
אין לחבר את שואב האבק לשקע לפני קריאת ההנחיות והוראות ההפעלה.

מברשת רצפה Pet Hair Eraser
(סדרה 42H5)

מברשת ריפוד

אביזר לניקוי חריצים

מברשת לשאיבת אבק

**1.** כדי לחבר את הצינור לשואב האבק, הכניסו את מחבר הצינור לתוך פתח השאיבה שבחלקה התחתון של חזית שואב האבק. דחפו עד לשמיעת צליל נקישה המעיד על מצב נעילה.

**2.** חברו את המוט הטלסקופי לידית של הצינור.

**3.** חברו את מברשת הרצפות למוט הטלסקופי.

**4.** חברו את תפס האביזרים לחלקו העליון של המוט הטלסקופי. שימו את האביזרים בתפס האביזרים, כדי לשמור עליהם.

**5.** להארכת המוט הטלסקופי, לחצו על כפתור השחרור השחור ואחר כך משכו את תחתית המוט עד לאורך הרצוי.

**6.** בתום הרכבת השואב, תוכלו לאחסן אותו על ידי הכנסת תפס האחסון (שממוקם בחלקה האחורי של מברשת הרצפה) לתוך חריץ האחסון שבחלקו האחורי של השואב.

**הערה: בבואכם לאחסן את השואב, קצרו את המוט הטלסקופי.**

**⚠אזהרה:**
עטיפות ניילון יכולות להיות מסוכנות. למניעת סכנת חנק, הרחיקו מתינוקות ומילדים.

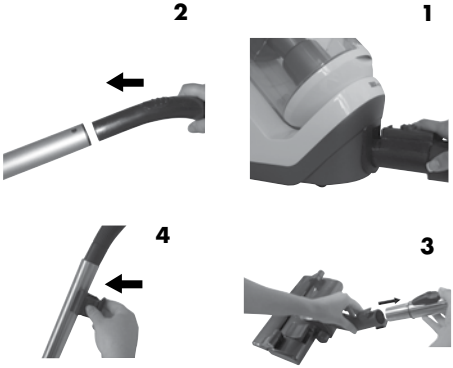

## כבל חשמל

כבל החשמל ממוקם בחלקו האחורי של השואב. משכו בעדינות את כבל החשמל. חפשו את הקו הצהוב. הפסיקו למשוך את כבל החשמל כשתראו את הקו הצהוב. ישנו גם קו אדום, שמצביע על קצה הכבל הניתן לשימוש. אין למשוך את כבל החשמל מעבר לקו האדום.

## כבל נגלל אוטומטית

שואב האבק שלכם מצויד בכבל נגלל אוטומטית. כאשר אתם מסיימים לנקות, לחצו על מתג הכיבוי ואחזו בתקע כדי לנתקו מהשקע. אחזו בתקע ולחצו על לחצן הגלילה האוטומטית כדי לגלול את הכבל בחזרה באופן אוטומטי.

**⚠ זהירות:**
היזהרו שלא להיפצע שכן הכבל נגלל במהירות רבה מאד.

## לחצן הפעלה

הפעילו או כבו את השואב בלחיצה קלה כלפי מטה על לחצן ההפעלה (ⓘ).

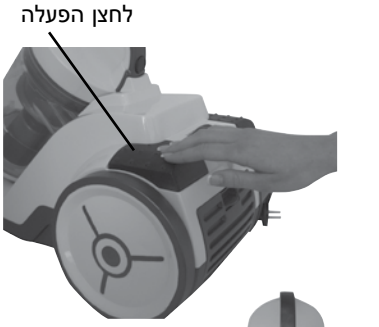


## וסת עוצמת שאיבה

וסת עוצמת השאיבה נמצא בחלקו האחורי של שואב האבק. לשאיבה בעוצמה מקסימלית סובבו את הוסת לעבר הנקודות הגדולות יותר. להפחתת עוצמת השאיבה, לשאיבת שטחים עם כמות לכלוך מועטה או אריגים עדינים, סובבו את הוסת כלפי הנקודות הקטנות יותר.

## וסת זרימת אוויר

הסיתו את וסת זרימת האוויר אחורה, לעבר הידית, כדי לפתוח אותו. פתיחתו של הוסת תקטין את עוצמת השאיבה ותאפשר לשאוב אבק מאריגים עדינים.

לעוצמת שאיבה מלאה, הסיתו את הוסת קדימה כדי לסגור את וסת זרימת האוויר.

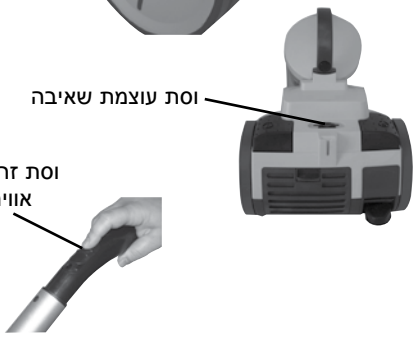


**⚠ זהירות:**
לפני השימוש בשואב האבק, וודאו שמיכל האיסוף וכל המסננים (לפני המנוע ואחרי המנוע) נמצאים במקומם. אין להפעיל את שואב האבק בהיעדר מיכל איסוף ומסננים.

***עצה:***
השתמשו בווסת עוצמת השאיבה ובווסת זרימת האוויר כדי להפחית את זרימת האוויר לפי הצורך בעת שימוש באביזרים.

## אביזרים מיוחדים

שואב האבק של BISSELL אינו רק שואב אבק עוצמתי לניקוי שטיחים ומרבדים. בעזרת אחד האביזרים המיוחדים אפשר להפוך אותו לשואב ורסטילי, שמנקה רצפות חשופות ושטחים מעל לרצפה.

1. **מברשת ריפוד:** השתמשו במברשת הריפוד לניקוי מסכים, וילונות, כריות ואריגים.
2. **אביזר לניקוי חריצים:** השתמשו באביזר לניקוי חריצים במקומות צרים.
3. **מברשת לשאיבת אבק:** השתמשו במברשת לשאיבת אבק כדי לנקות אבק מרהיטים, תריסים, ספרים, מנורות, מדפים ופנלים.
4. **מברשת Wide Pet TurborBrush™ (דגמים מסוימים בלבד):** השתמשו במברשת המסתובבת לשאיבת שטחים קטנים ושטוחים, לדוגמה כריות ומיטות.

**הערה: דחפו בעדינות כלפי מטה ומשכו אליכם בתנועת גריפה. הפעלת לחץ רב מידי יכול לגרום למברשת להפסיק להסתובב.**

5. מברשת **Pet Contour** (דגמים מסוימים בלבד): השתמשו בה כדי להגיע לפינות ולקצוות במדרגות, למשענות הידיים ולשטחים מעוגלים אחרים. אפשר לסובב את המברשת ולהשתמש בה בכל הכיוונים.
6. **מברשת רצפה:** השתמשו בה לשאיבת שטיחים, מרבדים ורצפות חשופות. הראש המסתובב יכול להיכנס למקומות צרים ומתחת לארונות.

**א.** לשאיבת שטיחים ומרבדים, העבירו את בורר המברשת למצב שטיח . פעולה זו תגרום לנסיגת המברשות פנימה לתוך מברשת הרצפה.

**ב.** לשאיבת רצפות חשופות, העבירו את בורר המברשת למצב רצפה חשופה . פעולה זו תגרום ליציאת המברשות מתוך מברשת הרצפה.

**שימו לב:**
אביזרים אלה נועדו להסיר את שיער חיות המחמד משטחים מרופדים או מכוסים בשטיחים. אין להשתמש בהם על חיות המחמד.

רזיבא Pet Contour Tool™

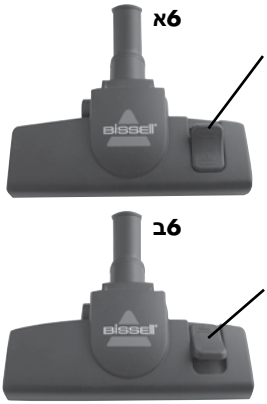

## אביזרים מיוחדים (המשך)

**7. מברשות רצפה מיוחדות (סדרה 42H5 בלבד):**
השתמשו בה כדי לשאוב את שיער חיות המחמד ממרבדים ומשטחים מכוסים בשטיחים. פשוט שאבו כרגיל. ה- Pet Hair Lifter ילכוד את שיער חיית המחמד כשאתם מושכים אחורה, וכשאתם דוחפים קדימה ישחרר אותו וישאב אותו.

**הערה: כבו את שואב האבק לפני שאתם מעלים או מורידים את ה- Pet Hair Lifter.**

**א.** לשאיבת מרבדים ושטחים שמכוסים בשטיחים, סובבו למטה והורידו את Pet Hair Lifter עד שייכנס למקומו בצליל נקישה אל חלקה הקדמי של מברשת הרצפה Pet Hair Eraser. כעת דחפו את בורר המברשת למצב שטיח כדי למשוך למעלה את המברשות לתוך מברשת הרצפה Pet Hair Eraser.

**ב.** לשאיבת רצפות חשופות, כדי להוריד את המברשות למטה ממברשת הרצפה Pet Hair Eraser, דחפו את בורר המברשת למצב רצפה חשופה. כעת לחצו על לחצן השחרור הצהוב כדי להעלות את Pet Hair Lifter. לחיצה זו תעלה את Pet Hair Lifter ותמנע ממנו להפריע לשאיבה.

**שימו לב:**
אביזרים אלה נועדו להסיר את שיער חיות המחמד משטחים מרופדים או מכוסים בשטיחים. אין להשתמש בהם על חיות המחמד.

**7א**

**7ב**

## ריקון מיכל האיסוף

**רוקנו את מכיל האיסוף כשרמת האבק מגיעה לקו "FULL" (מלא) שמשורטט בצידי מיכל האיסוף.**

1. נתקו את השואב מהשקע החשמלי.
2. לחצו על הלחצן לשחרור מיכל האיסוף שממוקם בחלקה האחורי של ידית הנשיאה והרימו אותה כדי להסירו.
3. בחרו שיטת ריקון. שיטה מס' 2 מומלצת לסובלים מאלרגיות.

**שיטה מס' 1 –** החזיקו את מיכל איסוף מעל פח אשפה. כדי לפתוח את הפתח התחתון של המיכל, לחצו על כפתור הריקון שבתחתית חלקו האחורי של מיכל האיסוף. לאחר שרוקנתם את המיכל, סגרו את הפתח. צליל נקישה יעיד על כך שהפתח ננעל בחזרה למקומו.

**שיטה מס' 2 –** שימו שקית פלסטיק מעל תחתית מיכל האיסוף. כדי לפתוח את הפתח התחתון של המיכל, לחצו דרך השקית על כפתור הריקון שבחלקו התחתון של מיכל האיסוף. המתינו לשקיעת האבק, הסירו את שקית הפלסטיק וזרקו אותה לפח. סגרו את הפתח וודאו שנשמע צליל נקישה שיעיד כי ננעל בחזרה למקומו.

## ניקוי הציקלון הפנימי והמסך

**המסננים מגנים על המנוע מפני לכלוך וחלקיקי אבק. השתמשו רק במסננים חלופיים של BISSELL בשואב האבק Pet Hair Eraser.**

1. נתקו את השואב מהשקע החשמלי.
2. הוציאו מהשואב את מיכל האיסוף.
3. הסירו את חלקו העליון של מיכל האיסוף. לשם כך, אחזו בידית הנשיאה וסובבו נגד כיוון השעון ומשכו למעלה והחוצה את מיכל האיסוף.

**אזהרה:**
כדי להפחית את סכנת ההתחשמלות, לפני ביצוע פעולות תחזוקה או בדיקות לפתרון בעיות כבו את מתג הכיבוי ונתקו את התקע מהשקע.

2

3

3

## ניקוי הציקלון הפנימי והמסך (המשך)

4. אחזו בתחתית הציקלון וסובבו בכיוון השעון כדי לשחררו. משכו ישר למטה כדי להוציאו. השתמשו במטלית כדי להסיר אבק ושאריות לכלוך.

5. משכו את המסננת ישר למטה כדי להוציאה. השתמשו במטלית או במברשת רכה כדי לנקותה ולהסיר ממנה אבק ושאריות לכלוך.

6. ניתן לנקות את המיכל גם עם מטלית לחה. לפני הרכבתו בחזרה, וודאו שהמיכל יבש לגמרי.

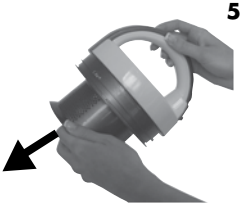


7. כדי להרכיב מחדש, החזיקו בידית הנשיאה והחזירו את המסננת לחלקו העליון של מיכל האיסוף. וודאו שיישרתם את החריץ שבחלק העליון עם הבליטה שבשוליה השטוחים של המסננת. כעת החזירו את הציקלון הפנימי לתוך המסננת. לשם כך התאימו את החריצים שבחלקו העליון של הציקלון הפנימי עם הבליטות שבתוך המסננת וסובבו נגד כיוון השעון כדי לנעול אותו בחזרה למקומו.

8. כדי להחזיר את החלק העליון על מיכל האיסוף החזיקו בידית הנשיאה וסובבו אותה בכיוון השעון כדי לנעול אותה בחזרה למקומה. כשנעול, וודאו שהלחצן לשחרור מיכל האיסוף נמצא בקו אחד עם לחצן הריקון.

**שימו לב:**
מוצר זה מיועד לשימוש ביתי בלבד ואינו מיועד לשימוש מסחרי או תעשייתי. שאיבת אבק ממוצרים כגון גבס, בטון או אפר תזיק למנוע ותבטל את האחריות.

## ניקוי המסנן שלפני המנוע

**המסנן שלפני המנוע מגן על המנוע מפני לכלוך וחלקיקי אבק. השתמשו רק במסננים חלופיים של BISSELL בשואב האבק Pet Hair Eraser.**

1. כבו את השואב. נתקו את השואב מהשקע החשמלי.

2. הוציאו מהשואב את מיכל האיסוף.

3. המסנן שלפני המנוע ממוקם מאחורי המכסה המתויג "FILTER" (מסנן) בחלקו המרכזי של השואב. כדי לפתוח את המכסה, לחצו כלפי מעלה על הלשונית שבתחתית המכסה ומשכו אותו החוצה כדי להסירו.

4. להוצאת מגש המסנן משכו את לשונית המגש כלפי מעלה. הסירו את המסנן שלפני המנוע והניחו אותו בצד. דפקו בעדינות את המגש על פח האשפה כדי להסיר את הלכלוך והפסולת שהצטברו.

## ניקוי המסנן שלפני המנוע (המשך)

5. אפשר לשטוף את המסנן שלפני המנוע במים קרים עם חומר ניקוי עדין. שטפו את המסנן ויבשו אותו היטב באוויר לפני שאתם מחזירים אותו בחזרה לתוך המגש.

6. החזירו את המגש לתוך השואב אבק והשיבו למקומו את מכסה המסנן על ידי הכנסת הלשוניות שבחלקו העליון ודחיפה מטה עד לשמיעת צליל נקישה המעיד על נעילתו במקומו.

*עצה:*
להשגת ביצועים מקסימאליים, בדקו את המסננים לעיתים קרובות ונקו או החליפו אותם לפי הצורך.

**⚠ אזהרה:**
אין להפעיל את השואב עם מסננים לחים או רטובים או כשהמסננים אינם במקומם.

## החלפת מסנן לאחר המנוע*

**המסנן לאחר המנוע הוא מסנן HEPA*, שמסייע בתהליך הסינון כדי להחזיר אוויר נקי לחדר.**

1. כבו את השואב. נתקו את השואב מהשקע החשמלי.

2. המסנן שלאחר המנוע ממוקם מאחורי המכסה המתויג "FILTER" (מסנן) שבחלקו האחורי של השואב. לפתיחת המכסה, לחצו כלפי מטה על הלשונית של המכסה ומשכו החוצה כדי להסירו.

3. להסרת מסנן HEPA שלאחר המנוע* אחזו בידית שעל המסנן ומשכו אותה החוצה.

4. החליפו את מסנן HEPA* שלאחר המנוע במסנן חדש.

**הערה: המסנן שלאחר המנוע הוא מסנן קפלים HEPA לבן. מסנן זה אינו רחיץ ויש להחליפו כשהוא מתלכלך.**

5. כדי להשיב למקומו את מכסה המסנן הכניסו את שתי הלשוניות למקומן בתחתית מכסה המסנן. אחר כך לחצו מטה את הלשונית שעל המכסה ולחצו אותו בחזרה לתוך השואב. שחררו את הלשונית שעל המכסה כדי לנעול אותו במקום.

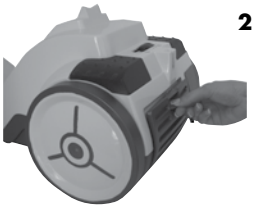


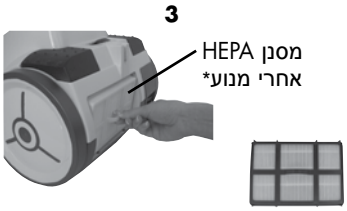


*המסנן, לא השואב בכללותו, עומד בתקן IEST-RP-CC001.5 HEPA.

## מברשת חיות מחמד Wide Pet TurboBrush™

1. נתקו את השואב מהשקע החשמלי.
2. אם יש חסימה או אם ניתן לראות לכלוך, סובבו את הצווארון שמסביב לצוואר של מברשת Wide Pet TurboBrush™ נגד כיוון השעון כדי להוציא את המסגרת ולנקות את החסימות.
3. כדי לנקות את הלכלוך מהמברשת, הוציאו את המברשת מרצועת ההנעה ונקו את הלכלוך.
4. החזירו למקומה את רצועת ההנעה על המברשת. הציבו את קצוות המברשת לתוך החריצים שבצדדים. מקמו בחזרה את המסגרת וסובבו את הצווארון בכיוון השעון למצב נעילה.

## מגן תרמי

**שואב האבק שברשותכם כולל מגן תרמי פנימי שנועד להגן עליו מפני התחממות יתר. אם מופעל המגן התרמי, מנוע השואב מפסיק לפעול. אם זה קורה:**

1. כבו את השואב (○) ונתקו משקע החשמל.
2. רוקנו את מיכל האיסוף, בדקו שהמסננים ומעברי האוויר אינם חסומים כתוצאה מהצטברות לכלוך.
3. המגן התרמי מתאפס אוטומטית לאחר כשעה. אם המגן התרמי לא התאפס, פנו אל שירותי הלקוחות של BISSELL.

**אזהרה:**
כדי להפחית את סכנת ההתחשמלות, לפני ביצוע פעולות תחזוקה או בדיקות לפתרון בעיות כבו את השואב ונתקו את התקע מהשקע.

## השואב אינו פועל

| סיבות אפשריות | פתרונות |
|---|---|
| 1. השואב אינו מחובר לחשמל | 1. בדקו את התקע |
| 2. לחצן ההפעלה אינו לחוץ | 2. לחצו על לחצן ההפעלה |
| 3. המגן התרמי הופעל | 3. אפשרו לשואב להתקרר למשך שעה אחת, ראו עמוד 12 |

## השואב אינו פועל או שעוצמת השאיבה נמוכה

| סיבות אפשריות | פתרונות |
|---|---|
| 1. האביזרים, הצינור ו/או המוט הטלסקופי חסומים | 1. הסירו כל חלק וודאו שאינם חסומים |
| 2. המסננים מלוכלכים | 2. בדקו ונקו או החליפו מסננים לפני מנוע ואחרי המנוע |
| 3. מיכל האיסוף מלא | 3. רוקנו את מיכל האיסוף |
| 4. הצינור אינו מחובר היטב לפתח השאיבה | 4. וודאו שמחבר הצינור נעול לתוך פתח השאיבה |
| 5. קיים סדק או חור בצינור הגמיש | 5. בדקו את הצינור והחליפו אותו במידת הצורך |
| 6. וסת זרימת אוויר או וסת עוצמת השאיבה | 6. שנו לסגור או למקסימום פתוחים או במצב מינימאלי |

## אבק נראה לעין בורח מהשואב

| סיבות אפשריות | פתרונות |
|---|---|
| 1. מיכל האיסוף מלא | 1. רוקנו את מיכל האיסוף |
| 2. המסננים חסרים או שאינם מותקנים כראוי | 2. בדקו שהמסננים לפני מנוע ואחרי מנוע הותקנו כראוי |
| 3. המסננים מלוכלכים | 3. בדקו ונקו או החליפו מסננים לפני מנוע ואחרי המנוע |
| 4. הצינור הגמיש חסום | 4. הסירו את הצינור ובדקו חסימות |
| 5. הצינור אינו מחובר היטב | 5. וודאו שמחבר הצינור נעול לתוך פתח השאיבה לפתח השאיבה |
| 6. קיים סדק או חור בצינור הגמיש | 6. בדקו את הצינור והחליפו אותו במידת הצורך |

**פעולות תחזוקה או שירות אחרות שאינן נכללות במדריך זה יבוצעו על ידי אנשי שירות מוסמכים.**

**אנו מודים לכם על בחירתכם במוצר של BISSELL.**

# חלקי חילוף

| פריט | מק״ט | שם חלק |
|---|---|---|
| 1 | 203-1578 | צינור |
| 2 | 203-1579 | מוט טלסקופי |
| 3 | 203-8151 | מברשת רצפות רב תכליתית (סדרה 42H5) |
| 4 | 203-1583 | מחזיק אביזרים |
| 5 | 203-1581 | מברשת ריפוד |
| 6 | 203-1580 | אביזר לניקוי חריצים |
| 7 | 203-1582 | מברשת אבק |
| 8 | 203-1290 | מברשת חיות מחמד Wide Pet TurboBrush |
| 9 | 203-1598 | מכלול ציקלון פנימי |
| 10 | 203-1569 | מסנן לפני מנוע |
| 11 | 203-1557 | מסנן HEPA אחרי מנוע* |
| 12 | 203-1291 | אביזר Pet Contour |
| 13 | 203-1536 | מברשת רצפות רב תכליתית (סדרות 68Z3 ו-78E9) |

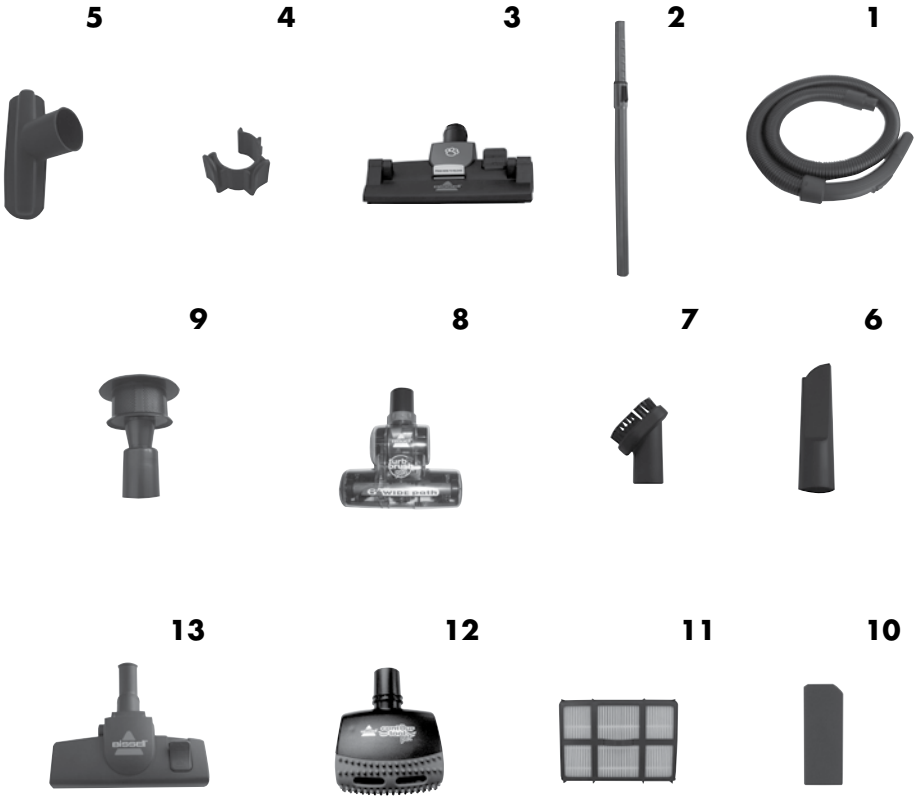


*המסנן, לא השואב בכללותו, עומד בתקן HEPA IEST-RP-CC001.5.

## אם נחוץ לך שירות למוצר של BISSELL שברשותך:

התקשר אל שירות הלקוחות של BISSELL למספרים שמופיעים למטה ואנו נמסור לך את פרטי מרכז שירות הלקוחות המורשה של BISSELL באזורך. לשאלות בנושא אחריות ולחלקי חילוף, התקשרו אל המספרים שלמטה.

### פניות בישראל:

ראשון - חמישי 08:00 - 17:00

**אלקטרה מוצרי צריכה 1951 בע"מ**
רח' ספיר 1
אזור תעשייה חדש
ראשון לציון 75704
ישראל
טלפון: 039633030

### פניות מהמזרח התיכון ואפריקה:

ראשון - חמישי 09:00 - 18:00

**BISSELL Middle East FZE**
PO Box 61286
Office 017, Technopark Building
Jebel Ali Free Zone
Dubai
United Arab Emirates
טלפון: 971-4-881-8597

או בקרו באתר של BISSELL -

## www.bissell.com

בעת פנייה אל BISSELL, הכינו מראש את מספר הדגם של שואב האבק.

נא רשמו את מספר הדגם שלכם: _____

נא רשמו את תאריך הרכישה שלכם: _____

BISSELL®

Experts In Home Cleaning™

©2012 BISSELL Homecare, Inc
Grand Rapids, Michigan
כל הזכויות שמורות. הודפס בסין
מק"ט 110-4586
גרסה 5/12
בקרו באתר שלנו בכתובת: www.bissell.com

**תוקף תעודה זו מותנה בצירוף חשבונית קנייה מקורית**

היצרן: BISSELL
היבואן: אלקטרה מוצרי צריכה (1951) בע"מ מרח' שמעון ישראלי 3,
א.ת חדש ראשל"צ, טל: 03-9633030.
סוג המכשיר: שואב אבק BISSELL
דגם: 5H42 / 3Z68 / 78E9

אנו אחראים בזאת לפעולתו התקינה של המכשיר לתקופה של שנה מתאריך האספקה.
אחריות זו לא תחול במקרים הבאים:

1. קלקול הנובע מהפעלה שלא לפי הוראות השימוש.
2. קלקול עקב אספקת חשמל לא סדירה.
3. שבר מכל סיבה שהיא.
4. תקלה שנגרמה כתוצאה מגורמים חיצוניים: שריפה, גשם, ברק וכד'.
5. נעשה שימוש במכשיר למטרות מסחריות.
6. החלפת שקיות אבק, מסננים ורפידות אינה כלולה באחריות.

האחריות האמורה תקפה בתנאי ששואב האבק יובא לתיקון בצירוף תעודה זו, כשהיא חתומה ע"י הסוחר ובצרוף חשבונית הקניה, **למעבדות המפורטות על הכריכה האחורית של חוברת זו.**

כל טיפול או תיקון שלא באמצעות המעבדות האמורות יגרום לביטולה של אחריות זו.

---

**פרטים למילוי על ידי הסוחר**

**שם הקונה:**_____

**תאריך המכירה:**_____

**חתימת הסוחר:**_____

**שם וכתובת הסוחר:**_____

שירות לאחריות
אלקטרה

# תחנות שירות ברחבי הארץ

| | | |
|---|---|---|
| 1. אילת | סלון ששון, א.ת חדש | טל: 08-6378368 |
| 2. אשדוד | חשמל קמי, מרכז מסחרי ב' חנות 24 | טל: 08-8525104 |
| 3. באר שבע | מאור הנגב 96, רח' יאיר 27 | טל: 08-6271410 |
| | | 08-6274563 |
| 4. חדרה | אחים איטח, הנשיא 53 | טל: 04-6326088 |
| 5. חיפה | שירות רם, רח' ביאליק 9 | טל: 04-8671507 |
| | | 04-8620162 |
| | - סניף נווה שאנן, רח' טרומפלדור 29 | 04-8227227 |
| | - סניף קריות, שד' ההסתדרות 279 | 04-8720642 |
| 6. טבעון | שרות רם האלונים 97 | טל: 04-9832011 |
| 7. טבריה | המקלט, רח' הגלבוע 5 | טל: 04-6720991 |
| 8. ירושלים | שירות כל, רח' הגידם 1 | טל: 02-6241741 |
| 9. מודיעין | חשמל אדיר, רח' עמק האלה 80, | טל: 08-9465678 |
| 10. כפר סבא | שי קור המעבדה, דוד אלעזר 6 | טל: 09-7603355 |
| 11. נתניה | בר מנחם נחום, רח' רמז 15 | טל: 09-8337733 |
| 12. עפולה | חשמל דושניצקי, שד' ארלוזרוב 6 | טל: 04-6522357 |
| 13. קרית ביאליק | ס.א.פ, רח' החרושת 28, א.ת קרית ביאליק | טל: 04-8764559 |
| 14. קריית שמונה | שירות רם סחר, רח' רסקו 44 | טל: 04-6903674 |
| 15. ראשון לציון | השחזות ראשון, רח' עין הקורא 11 | טל: 03-9666105 |
| 16. רמת גן | אלקטרו ברק, רח' התקווה 25 | טל: 03-7511145 |
| 17. רמת השרון | מעבדות השרון, ויצמן 1 פינת סוקולוב | טל: 03-5477745 |
| 18. רעננה | טל אור, רח' עקיבא 1 | טל: 09-7603387 |
| 19. תל אביב | אלקטרו מור, רח' לה גרדיה 22 | טל: 03-5371015 |
| 20. תל אביב | אליאס, רח' העליה 20 | טל: 03-6830191 |
| 21. תל אביב | י. רובין מכשירי גילוח בע"מ, רח' יסוד המעלה 8 | טל: 3-6872161 |

כתובתנו באינטרנט: http://www.electra-consumer.co.il

לקוחות נכבדים,
החברה שומרת לעצמה את הזכות לשנות את המפרטים המצוינים בהוראות ההפעלה ללא הודעה מוקדמת, ומבלי שתחול עליה חבות כל שהיא עקב כך.

שירות ואחריות
אלקטרה

רח' שמעון ישראלי 3, א.ת חדש, ראשון לציון, מיקוד 75143 טל' 03-9633030

BISSELL®

Experts In Home Cleaning™

PEThair ERASER™ CLEANview™ POWER dual cyclonic CLEANview™ DUAL CYCLONIC pet

# USER'S GUIDE

68Z3, 42H5, 78E9 SERIES 220-240V


2 Thank You

3 Safety Instructions

4 Product View

5 Assembly

6-8 Operations

9-12 Maintenance and Care

13 Troubleshooting

14 Replacement Parts

15 Consumer Care

## Thanks for buying a BISSELL Vacuum

We're glad you purchased a BISSELL vacuum. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL vacuum is well made, and we back it with a limited one year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL vacuum.

Thanks again, from all of us at BISSELL.



Mark J. Bissell
Chairman & CEO

# IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

## READ ALL INSTRUCTIONS BEFORE USING YOUR UPRIGHT VACUUM.

## ⚠ WARNING: To reduce the risk of fire, electric shock, or injury:

- Do not use outdoors or on wet surfaces.
- Do not leave machine when it is plugged in.
- Do not use with damaged cord or plug.
- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service agent.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, run appliance over cord, or expose cord to heated surfaces.
- Do not unplug by pulling on cord. Unplug by grasping plug.
- Do not handle plug or appliance with wet hands.
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- Do not pick up hot or burning objects such as cigarettes, matches, or hot ashes.
- Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc.) or use in the presence of explosive liquids or vapour.
- Do not use appliance in an enclosed space filled with vapours given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapours.
- Not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Remove plug from electrical outlet before cleaning or maintaining the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, petrol, etc.).
- Do not allow to be used as a toy.
- Do not use for any purpose other than described in this User's Guide.
- Use only manufacturer's recommended attachments.
- Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep appliance on a level surface.
- Turn off all controls before unplugging.
- Be extra careful when cleaning stairs.
- This appliance is provided with double insulation. Use only identical replacement parts.
- Do not use without the dirt container and filters in place.
- Pay close attention when working around children.
- Unplug before attaching TurboBrush™ Pet tool.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.

## SAVE THESE INSTRUCTIONS FOR FUTURE USE

This model is for household use only.

## IMPORTANT

FOR OPERATION ON A 220-240 VOLT A.C. 50 Hz POWER SUPPLY ONLY.

If your appliance is fitted with a nonrewireable BS 1363 plug it must not be used unless a 13 amp (ASTA approved to BS 1362) fuse is fitted in the carrier contained in the plug. (Spares may be obtained from your BISSELL supplier). If for any reason the plug is cut off, it must be disposed of, as it is an electric shock hazard should it be inserted into a mains socket.

# Product view

**⚠ CAUTION:**
Do not plug in your vacuum until you are familiar with all instructions and operating procedures.

Pet Hair Eraser Floor Nozzle
(42H5 Series)

Upholstery Tool

Crevice Tool

Dusting Brush

# Assembly

1. Connect the hose to the vacuum by inserting the hose connector into the suction opening on the bottom front of the vacuum. Push in until it clicks into the locked position.
2. Connect the telescoping extension wand to the handle end of the hose.
3. Connect the floor nozzle foot onto the telescoping extension wand.
4. Attach the tool holder onto the top portion of the extension wand. Place the tools onto the tool holder for storage.
5. To extend the telescoping extension wand, push the black release button and then pull the bottom of the wand to the desired length.
6. Once assembled, you can store your vacuum by inserting the storage clip (located on the back of the floor nozzle) into the storage slot on the rear of the vacuum.

   **NOTE: Shorten the length of the telescoping extension wand for storage.**

**⚠ WARNING:**
Plastic film can be dangerous. To avoid danger of suffocation, keep away from babies and children.

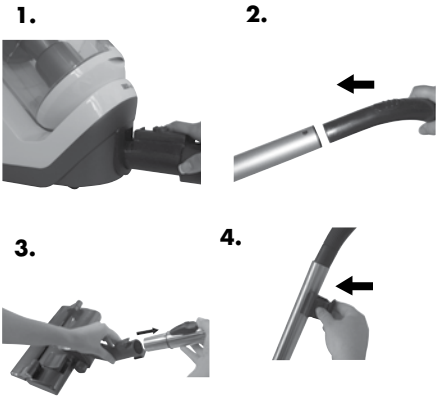

# Operations

## Power cord

The power cord is located at the rear of the vacuum. Gently pull out the power cord, watching for the yellow line. Stop pulling the power cord once the yellow line is visible. There is also a red line, which indicates the end of the usable cord. Do not pull the power cord out beyond the red line.

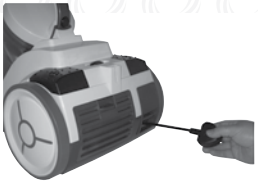

## Automatic cord rewind

Your vacuum is equipped with an automatic cord rewind. When cleaning is finished, press the power button OFF ( ⏻ ) and grasp the plug to disconnect from the electrical outlet. Hold the plug and press the automatic cord rewind button to rewind the cord automatically.

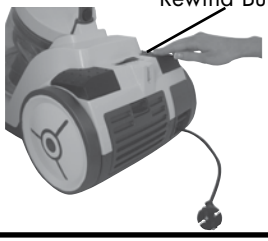


**⚠ CAUTION:**
Be careful to avoid injury as cord retracts very quickly.

## Power button

Turn the power ON or OFF by pressing lightly downward on the power button ( ⏻ ).

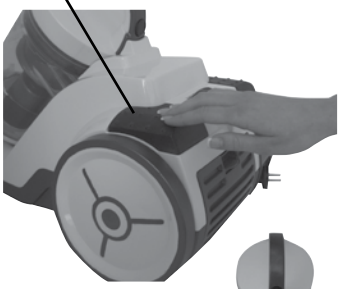


## Variable suction power control

The variable suction power control is located on the back of the vacuum. Turn the control toward the larger dots for maximum suction. Turn the control toward the smaller dots to minimize suction for lightly soiled areas or delicate fabrics.

## Air flow regulator

Open the air flow regulator by sliding the regulator back towards the handle to an open position. This will reduce the suction power for vacuuming delicate fabrics.

For full suction power, close the air flow regulator by sliding the regulator forward to the closed position.

**⚠ CAUTION:**
Before using your vacuum, make sure that the dirt container and all filters (pre-motor and post-motor) are in place. Do not operate your vacuum without the dirt container and filters.

*Tip:*

Use the variable suction power control and the air flow regulator to reduce air flow as needed when using the tools.

## Special tools

Your BISSELL vacuum is not only a powerful carpet and rug vacuum cleaner, it's also a versatile bare floor and above floor vacuum cleaner when you select one of the special tools.

1. **Upholstery tool:** Use the upholstery tool to clean curtains, draperies, cushions and fabrics.
2. **Crevice tool:** Use the crevice tool in tight, narrow spaces.
3. **Dusting brush:** Use the dusting brush to dust furniture, blinds, books, lamps, shelves and baseboards.
4. **Wide Pet TurborBrush™ Tool (select models only):** Use rotating brush action for small, flat areas such as cushions and beds.

   **NOTE: Press down gently and pull toward you in a raking motion. Too mush pressure will cause the brush to stop rotating.**
5. **Pet Contour Tool (select models only):** Use to reach into corners and edges on stairs, plus armrests and other curved surfaces.The tool can be flipped to use in any direction.
6. **Floor nozzle:**

   Use to vacuum carpets, rugs and bare floors. Swivel head turns to get into tight spaces and fits under cabinets.

   **A.** To vacuum carpets and rugs, push the brush switch to the carpet position. This will pull the brushes up into the floor nozzle.

   **B.** To vacuum bare floors, push the brush switch to the bare floor position. This will extend the brushes down from the floor nozzle.

**NOTICE:**
These tools are designed to remove pet hair from upholstered or carpeted surfaces. They should not be used on pets.

1.

2.

3.

4.

5.

Pet Contour Tool™

6A.

6B.

## Special tools cont

**6. Special Floor Tool (42H5 Series Only):**

Use to pick up pet hair from rugs and carpeted surfaces. Just vacuum like you normally would. The Pet Hair Lifter will grab the pet hair when you pull back and it will release the hair and suction it up when you push forward.

**NOTE: Turn the vacuum off before you flip up or down the Pet Hair Lifter.**

**A.** To vacuum rugs and carpeted surfaces, flip the down the Pet Hair Lifter until it clicks into place on the front of the Pet Hair Eraser Floor Nozzle. Th en push the brush switch to the carpet position to pull the brushes up into the Pet Hair Eraser Floor Nozzle.

**B.** To vacuum bare floors, push the brush switch to the bare floor position to extend the brushes down from the Pet Hair Eraser Floor Nozzle. Then flip up the Pet Hair Lifter by pushing the yellow release button. This will flip the Pet Hair Lifter up and out of the way.

**NOTICE:**
These tools are designed to remove pet hair from upholstered or carpeted surfaces. They should not be used on pets.

**7A.**

**7B.**

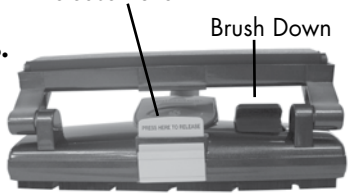

# Maintenance and care

## Emptying the dirt container

**Empty the dirt container as soon as the dirt reaches the "FULL" lines on the sides of the dirt container.**

**1.** Unplug the vacuum from the electrical outlet.

**2.** Press the dirt container release button located on the back of the carry handle and lift up to remove.

**3.** Choose an emptying method. Method #2 is recommended for allergy sufferers.

**Method #1** – Hold the dirt container over a trash can and push the emptying button located on the back bottom of the dirt container to open the bottom door. Close the door after the dirt empties and make sure it clicks back into the locked position.

**Method #2** – Place a plastic bag over the bottom of the dirt container. Push the emptying button, located on the back bottom of the dirt container, through the plastic to open the bottom door. After the dust settles, remove the plastic bag to discard. Close the door and make sure it clicks back into the locked position.

**⚠ WARNING:**
To reduce the risk of electric shock, turn power switch OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.

2.

3.

## Cleaning the inner cyclone & screen

**Filters protect the motor from dirt and dust particles. Use only BISSELL replacement filters in your Pet Hair Eraser.**

**1.** Unplug the vacuum from the electrical outlet.

**2.** Remove the dirt container from the vacuum.

**3.** Remove the top portion of the dirt container by grasping the carry handle and turning counter clockwise and pulling up and out of the dirt container.

3.

## Cleaning the inner cyclone & screen continued

**4.** Remove the inner cyclone by grasping the bottom of the cyclone and turning clockwise to unlock. Pull straight down to remove. Clean with a cloth to remove dust and debris

**5.** Remove the screen by pulling straight down. Clean with a cloth or a soft brush to remove dust and debris.

**6.** The tank may also be wiped clean with a damp cloth. Make sure the tank is completely dry before reassembling.

**7.** To reassemble, hold the carry handle and place the screen back onto the top portion of the dirt container. Be sure to align the notch on the top with the insert on the flat edge of the screen. Then place the inner cyclone back into the screen by aligning the notches at the top of the inner cyclone with the inserts inside the screen and turning counter clockwise to lock into place.

**8.** Place the top portion back onto the dirt container by grasping the carry handle and turning clockwise to lock into place. Be sure that the dirt container release button is aligned with the emptying button when locked into place.

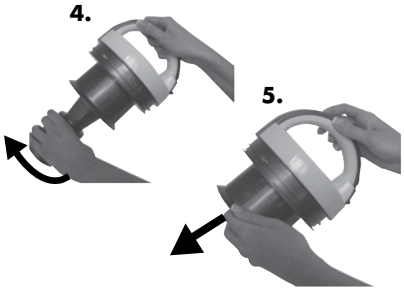


**NOTICE:**
This product is intended for household use only and not for commercial or industrial use. Vacuuming of dust from products like plaster, concrete or ashes will damage the motor and void the warranty.

## Cleaning the pre-motor filter

**The pre-motor filter protects the motor from dirt and dust particles. Use only BISSELL replacement filters in your Pet Hair Eraser.**

**1.** Turn the power OFF. Unplug the vacuum from the electrical outlet.

**2.** Remove the dirt container from the vacuum.

**3.** The pre-motor filter is located behind the door labeled "FILTER" on the main body of the vacuum. Open the door by pushing up on the tab at the bottom of the door and pulling out to remove.

**4.** Remove the filter tray by pulling up on the tab of the tray. Remove the pre-motor filter and set aside. Tap the tray gently over a trash can to remove any dirt or debris.

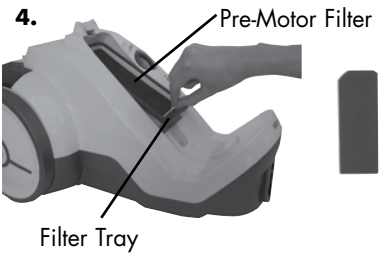

## Cleaning the pre-motor filter continued

5. The pre-motor filter can be washed in cold water with a mild detergent. Rinse well and air dry thoroughly before placing back into the tray.

6. Place the tray back into the vacuum and replace the filter door by inserting the tabs at the top of the door and pushing down until it clicks into the locked position.

*Tip:*

For maximum cleaning performance, check the filters often and clean or replace if necessary.

## Replacing the post-motor filter*

**The post-motor filter is a HEPA media filter,* which assists in the filtration process to return clean air to the room.**

1. Turn the power OFF. Unplug the vacuum from the electrical outlet.

2. The post-motor filter is located behind the door labeled "FILTER" on the rear of the vacuum. Open the door by pushing down on the tab of the door and pulling out to remove.

3. Remove the post-motor HEPA media filter* by grasping the handle on the filter and pulling out to remove.

4. Replace the post-motor HEPA media filter* with a new filter.

   **NOTE: The post-motor filter is a white, pleated HEPA media filter*. This filter* is NOT washable and must be replaced when it becomes dirty.**

5. Replace the filter door by inserting the two tabs at the bottom of the filter door. Then push down on the tab on the door and push it back into the vacuum. Release the tab on the door to lock into place.

**⚠ WARNING:**
Do not operate cleaner with damp or wet filters or without all filters in place.

2.

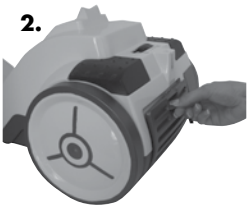

3.

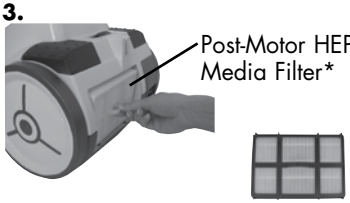


*The filter media, not the vacuum as a whole, complies with the IEST-RP-CC001.5 HEPA Standard.

## Wide Pet TurboBrush™ Tool

**The Wide Pet TurboBrush™ Tool should be checked regularly for clogs or debris wrapping around the brush.**

1. Unplug the vacuum from electrical outlet.
2. If a clog is present or debris is visible, turn the collar on the neck of the Wide Pet TurboBrush™ Tool counterclockwise to the unlocked position to remove the faceplate and clear any obstructions.
3. To clean debris from the brush, remove the brush from the drive belt and clean debris.
4. Reposition the drive belt on the brush. Place the ends of the brush in the slots on the sides. Reposition the faceplate and turn the collar clockwise to the locked position.

## Thermal protector

**An internal thremal protector has been designed into your vacuum to protect it from overheating. When the thermal protector activates, the vacuum motor will stop operating. If this happens:**

1. Turn the vacuum OFF (O) and unplug from electrical outlet.
2. Empty dirt container, check filters and air passages for dirt accumulation.
3. The thermal protector automatically resets after approximately 1 hour. If the thermal protector does not reset, call BISSELL Consumer Services.

# Troubleshooting

**⚠ WARNING:**
To reduce the risk of electric shock, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.

## Vacuum cleaner won't run

| Possible causes | Remedies |
|---|---|
| 1. Vacuum cleaner is not plugged in | 1. Check electrical plug |
| 2. Power button is not pressed down | 2. Press power button down |
| 3. Thermal protector activated | 3. Allow vacuum to cool for 1 hour, see page 12 |

## Vacuum cleaner won't pick up or low suction

| Possible causes | Remedies |
|---|---|
| 1. Tools, hose and/or telescoping extension wands are blocked | 1. Remove each part and check for blockages |
| 2. Filters are dirty | 2. Check and clean or replace pre-motor and post-motor filters |
| 3. Dirt container is full | 3. Empty dirt container |
| 4. Hose not securely attached to suction opening | 4. Make sure hose connector is locked into suction opening |
| 5. Crack or hole in flex hose | 5. Check hose and replace if needed |
| 6. Air flow regulator or variable suction power control is set to open or minimum setting | 6. Change to closed or maximum setting |

## Visible dust escaping from vacuum

| Possible causes | Remedies |
|---|---|
| 1. Dirt container is full | 1. Empty dirt container |
| 2. Filters missing or installed incorrectly | 2. Check pre-motor and post-motor filter for correct installation |
| 3. Filters are dirty | 3. Check and clean or replace pre-motor and post-motor filters |
| 4. Flex hose is blocked | 4. Remove hose and check for blockages |
| 5. Hose not securely attached to suction opening | 5. Make sure hose connector is locked into suction opening |
| 6. Crack or hole in flex hose | 6. Check hose and replace if needed |

**Other maintenance or service not included in the manual should be performed by an authorized service representative.**

**Thank you for selecting a BISSELL product.**

**Please do not return this product to the store.**

# Replacement parts

| Item | Part No. | Part Name |
|---|---|---|
| 1 | 203-1578 | Hose |
| 2 | 203-1579 | Telescoping Extension Wand |
| 3 | 203-8151 | Multi-Surface Floor Nozzle (42H5 series) |
| 4 | 203-1583 | Tool Holder |
| 5 | 203-1581 | Upholstery Tool |
| 6 | 203-1580 | Crevice Tool |
| 7 | 203-1582 | Dusting Brush |
| 8 | 203-1290 | Wide Pet TurboBrush™ Tool |
| 9 | 203-1598 | Inner Cyclonic Assembly |
| 10 | 203-1569 | Pre-Motor Filter |
| 11 | 203-1557 | Post-Motor HEPA Media Filter* |
| 12 | 203-1291 | Pet Contour Tool™ |
| 13 | 203-1536 | Multi-Surface Floor Nozzle (68Z3 & 78E9 series) |

**1**

**2**

**3**

**4**

**5**

**6**

**7**

**8**

**9**

**10**

**11**



**12**

**13**

*The filter media, not the vacuum as a whole, complies with the IEST-RP-CC001.5 HEPA Standard.

# BISSELL consumer care

## If your BISSELL product should require service:

Call BISSELL Consumer Care at the numbers below and we will give you the location of a BISSELL Authorized Service Center in your area. For all other countries, contact your local in country distributor for questions, service, or repair.
If you have questions about your warranty or need replacement parts please contact the numbers below.

**For Israel inquiries:**
Sunday - Thursday 8 am - 5 pm

**Electra Consumer Prod. 1951 Ltd.**
1, Sapir St.
New Industrial Zone
Rishon Le Zion 75704
Israel
Telephone: 039633030

**For Middle East & Africa inquiries:**
Sunday - Thursday 9 am - 6 pm

**BISSELL Middle East FZE**
PO Box 61286
Office 017, Technopark Building
Jebel Ali Free Zone
Dubai
United Arab Emirates
Telephone: 971-4-881-8597

Or visit the BISSELL website - **www.bissell.com**

When contacting BISSELL, have model number of cleaner available.
Please record your Model Number: _____
Please record your Purchase Date: _____

BISSELL®

**Experts In Home Cleaning™**

©2012 BISSELL Homecare, Inc
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 110-4586
Rev 2/12
Visit our website at:
www.bissell.com